


TDS Sheet # 05

Full - Depth Base Asphalt Restoration

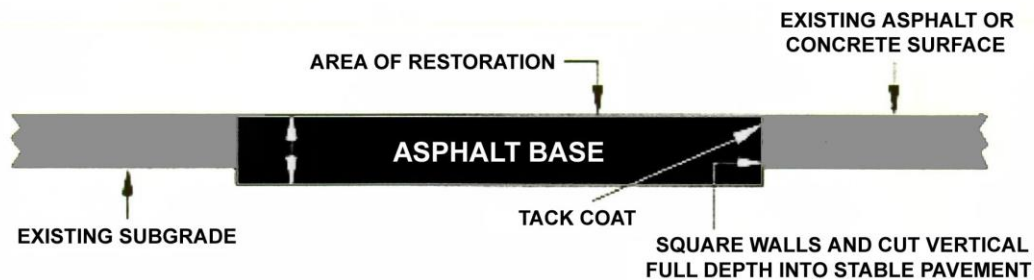

1. Lay out and mark all areas of repair.
2. Excavate areas to be repaired to a depth of 6". Dispose of all debris offsite.
3. Square surface of repair and cut walls of repair to produce vertical edges.
4. Roll existing sub-grade materials to achieve maximum density.
5. Mechanically apply liquid asphalt tack coat to all vertical edges of repair.
6. Install 6" of hot mix asphalt base course material.
7. Roll asphalt base course to achieve a true and firm finish matching existing grade.

